


Thanks for buying the COPILOT FX ROBOTUM:

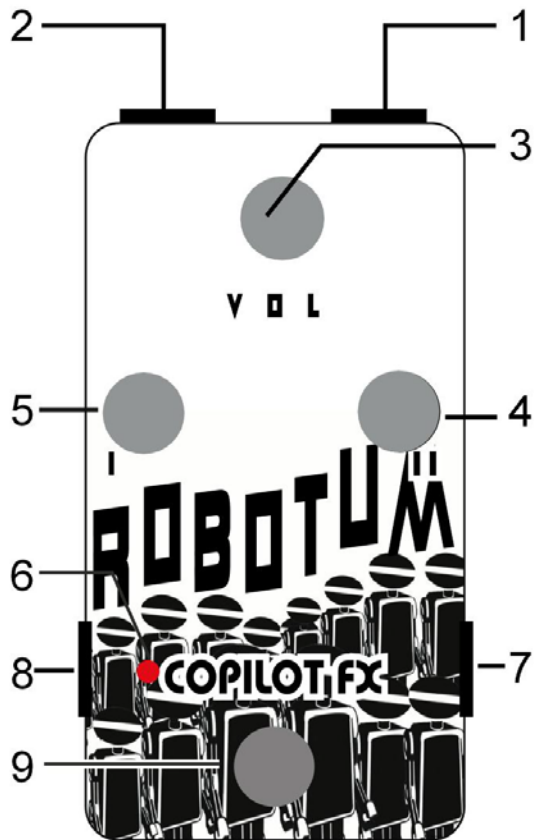

How to use it:

- 1- Input Jack: signal from your instrument or output from another pedal.
- 2- Output Jack: Output to other FX pedal or Amplifier
- 3- VOL: Amount of volume, when the ROBOTUM is activated.
- 4- II: Mix knob, increasing it adds more ring modulation.
- 5- I: Sets the carrier frequency.
- 6- Led Indicator: when is on, the output will be the ROBOTUM, when off the pedal is Bypassed).
- 7- EXP / CV Jack: External control of the carrier frequency via a TRS expression pedal (it will work with any value as long as the plug is TRS) or Control

Voltage / CV (0-5v) signal. Compatible with the Broadcast / Broadband / Bandwidth.

- 8- Power Jack: 9v adapter input, 9v center negative 10mA or higher.

For help, comments, suggestions, complaints please email me at:

adam@copilotfx.com

For info please visit:

www.copilotfx.com

www.facebook.com/copilotfx