


Thanks for buying the COPILOT FX TREK:

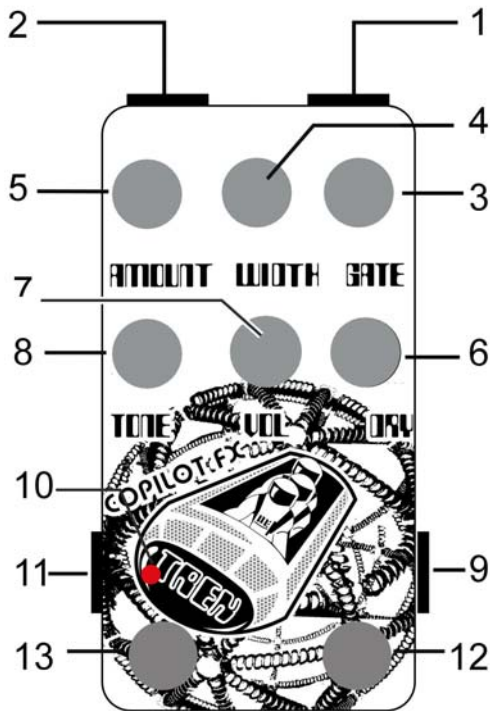

- 9- Expression Input (TRS) for the WIDTH: External control of the pulse width via a TRS expression pedal or 0-5v CV signal.
- 10- Led Indicator: Is red when the fuzz is on.
- 11- Power Jack: 9v adapter input, 9v center negative 10mA or higher
- 12- Oscillation Footswitch: Activates the oscillation, set the amount to the proper oscillation pit frequency.
- 13- Bypass Footswitch: Activates the pedal.

For help, comments, suggestions, complaints please email me at:

adam@copilotfx.com

For info please visit:

www.copilotfx.com

www.facebook.com/copilotfx

How to use it:

- 1- Input Jack: signal from your instrument or output from another pedal.
- 2- Output Jack: Output to other FX pedal or Amplifier
- 3- GATE: Increase the intensity and sustain of the fuzz voice.
- 4- WIDTH: Sets the range of the Pulse Width of the fuzz signal, fully to the right it provides more bass, decreasing it makes the fuzz voice more thin and trashy.
- 5- Amount: Sets the pitch of the oscillation.
- 6- DRY: adds the signal at the input, to allow more clarity and control.
- 7- VOL: Amount of fuzz volume at the output.
- 8- Tone: tone control for the fuzz section.